 
 
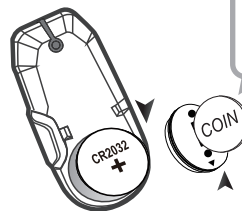 
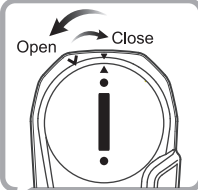 
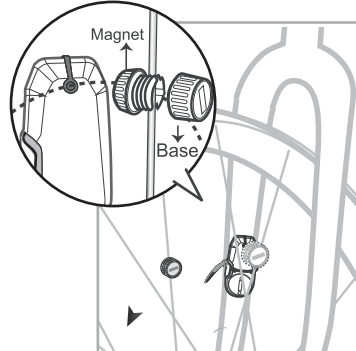 
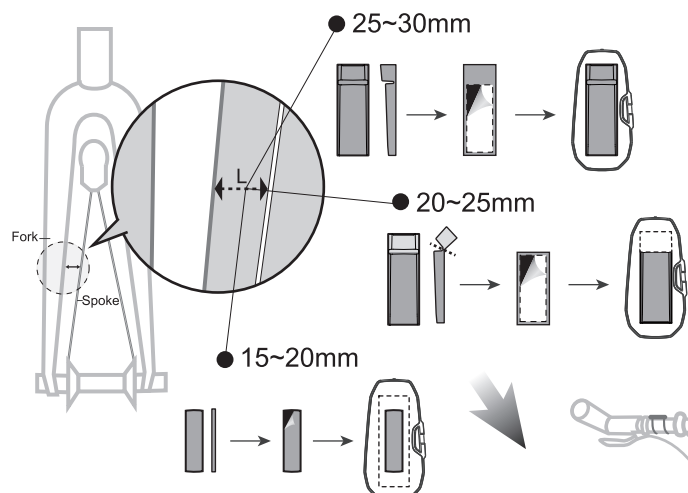 
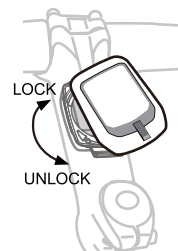 
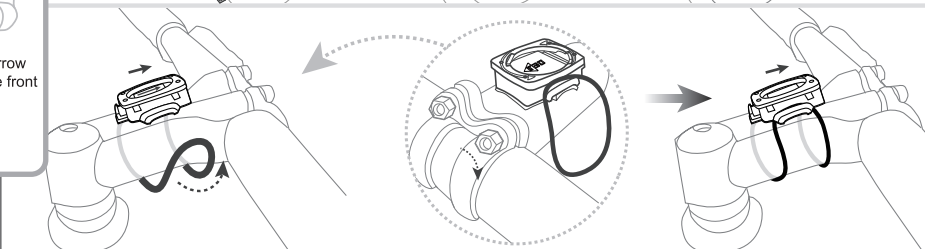 
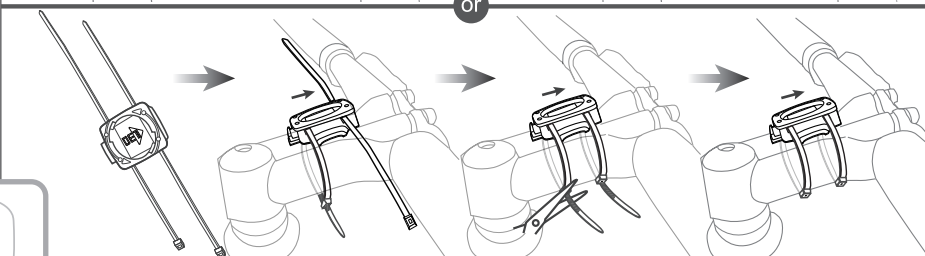 
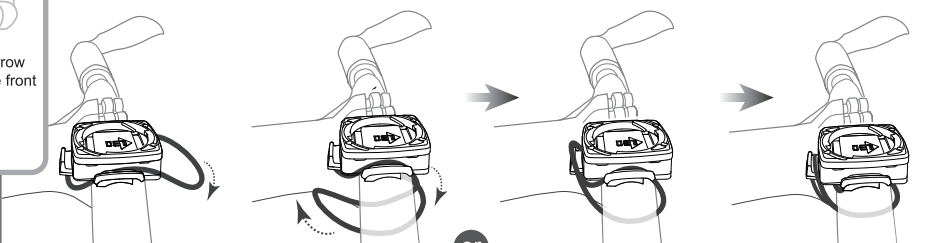 
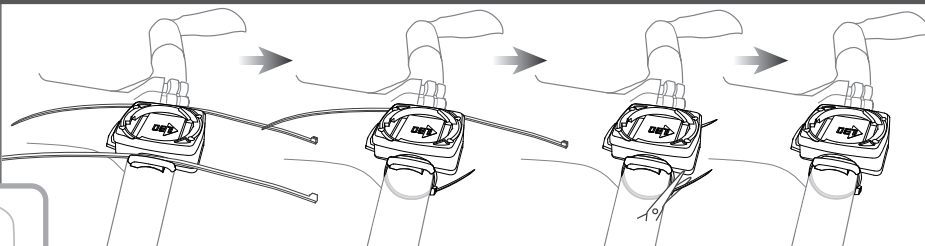 
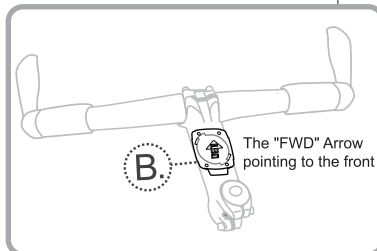 
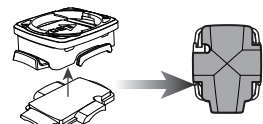 


# WIRELESS INSTALLATION INSTRUCTIONS

## Battery Change

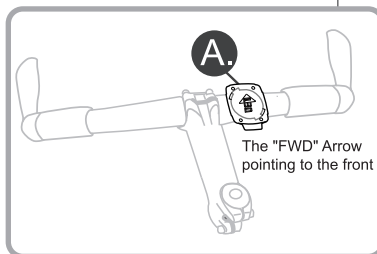

 
(Optional)

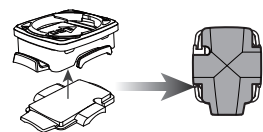

Magnet should pass the center of sensor mark

GAP < 8mm

(Optional)





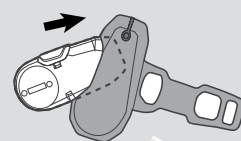


Position Adjustable








Check the length (L) here

0 15 20 25 30


# WIRED INSTALLATION INSTRUCTIONS

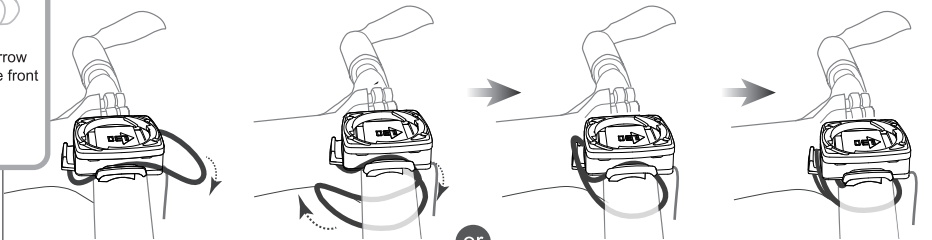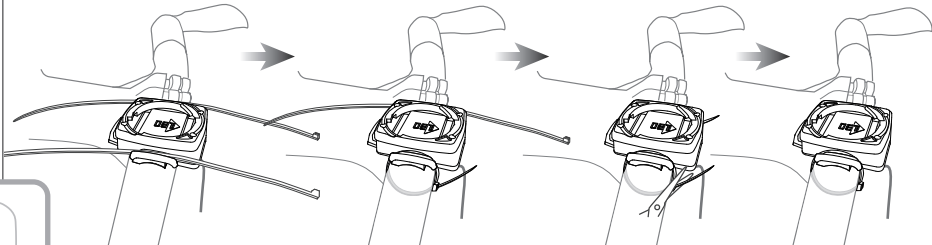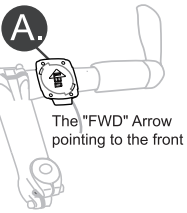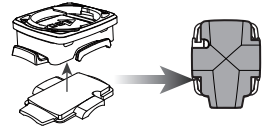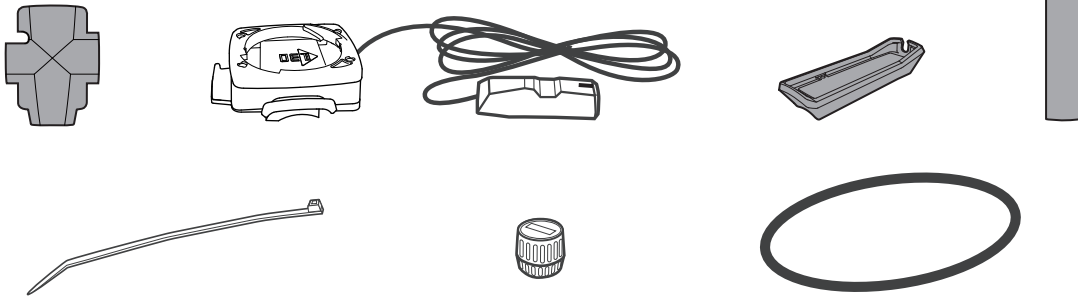     






or

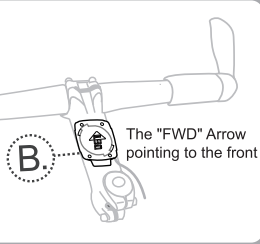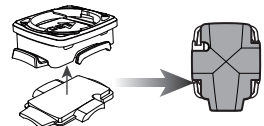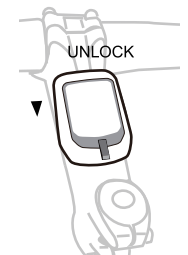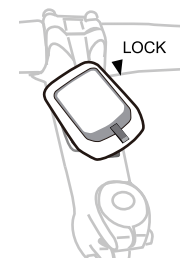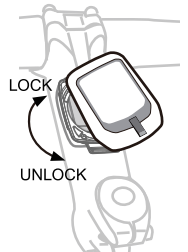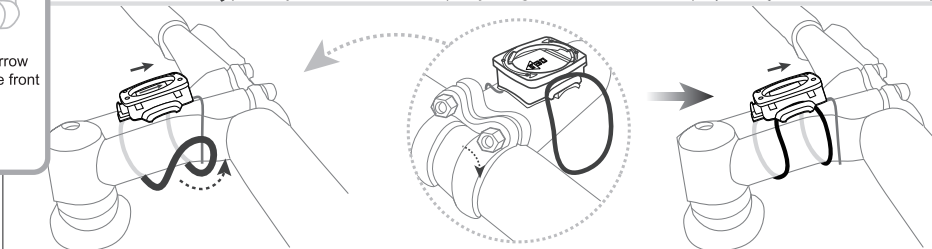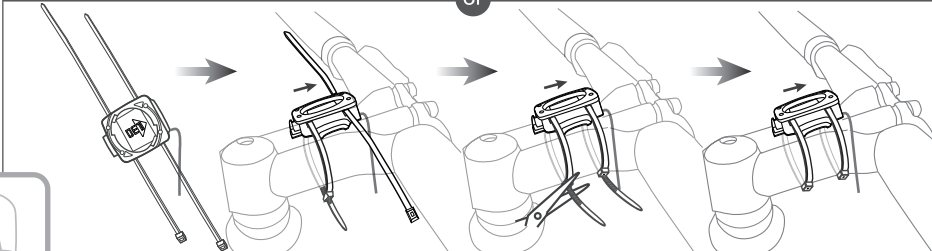       

Check the GAP

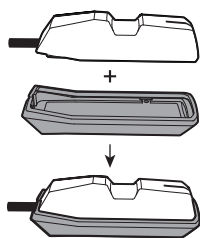 

or

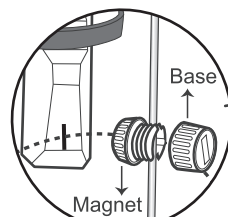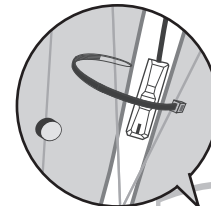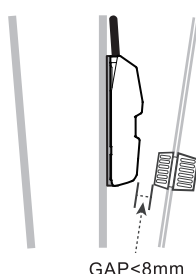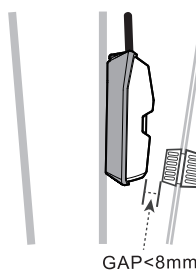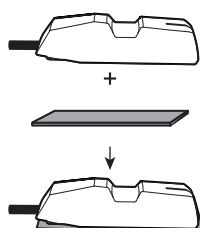     

Magnet should pass the center of sensor mark

