

xplover

GB

User's Manual



xplova

© Copyright 2010, Xplova Incorporated. This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. Neither this User's Manual, nor any of the material contained herein, may be reproduced without written consent of the author.

Download the latest version of this document at www.xplova.com.

XPLOVA Inc.

4F-3, No 66, Sanchong Rd., Nangang District,

Taipei 11560, Taiwan, R.O.C.

E-mail: sales@xplova.com

www.xplova.com

Version: 1.0

Getting Started	1
Getting to Know the Xplova G3	2
Included Accessories	4
Features of the Xplova G3	5
Record/View Cycling Data	5
Smart-Sign™ Track Navigation	6
Real-time Analysis Chart	6
Training	6
Optional Accessories	7
Charging the Xplova G3	8
Powering up the Xplova G3	10
Using the Button Controls	11
Adjusting Brightness and Turn On/Off Volume	11
Switching Modes	12
Recording a Session	14
Locking the Screen	14
Power Options	15
Menu	16
Creating a Profile	18
Acquiring a GPS Signal	18
Connecting to Sensors	19
Mounting the Xplova G3	19
Using the GPS Bike Computer	25
Bike Computer Mode	25
The Bike Computer Interface	25
Quick Menu of Bike Computer	27
Bike Computer Data	28

Map Mode	32
The Map Interface	32
Quick Menu of Map	33
Track Navigation & Smart-Sign™ Guidance	34
Chart Mode	35
The Chart Interface	35
Quick Menu of Chart	36
Elevation Profile	37
Training Mode	38
The Training Interface	38
Quick Menu of Training	39
Editing Pages	40
Edit this Page	40
Add New Page	41
Delete this Page	41
Changing Settings	43
My Data	43
Mode Selection	44
Bike Computer Settings	45
Setting up Alert	45
Setting up Recording Options	46
Map Settings	47
Changing the Map View	47
Training Settings	48
User and Bikes	49
User Profile	49
Bike Profile	50

General Settings	52
Satellites	53
Display	55
Sounds	56
Time	56
Units	57
Language	58
Altimeter Calibration	58
Compass Calibration	60
Factory Reset	62
About	63
Using your Accessories	65
Heart Rate Monitor (Optional)	65
Pairing the Heart Rate Monitor	65
Wearing the Heart Rate Monitor	67
Changing the Heart Rate Monitor Battery	68
Combo Cadence Sensor (Optional)	68
Pairing the Combo Cadence Sensor	68
Installing the Combo Cadence Sensor	71
Training with the Combo Cadence Sensor	74
Changing the Combo Cadence Battery	75
Battery Charger (Optional)	76
Using the PC Applications	77
Feature of X-Tracks™	77
Backup/View Activity Data	77

GPX & TRK Import/Export	77
Smart-Route™ Track Planner	78
Download Detail Maps	78
Updating the Xplova G3 Software	78
Appendix	81
Specifications	81
Wheel Size Table	85
Declarations of Conformity	88
Duales System Deutschland GmbH Participant	88
CE Declaration of Conformity (CENELEC Europe)	88
WEEE directive	88

Getting Started

Congratulations on having purchased the Xplova G3 GPS Bike Computer. In this chapter you will discover key features and understand how to power up and use basic features of the user interface. Further chapters explain how to use the full features and functions of the bike computer.

Getting to Know the Xplova G3

This section introduces your Xplova G3 and its main features.



Figure 1. The Xplova G3 front


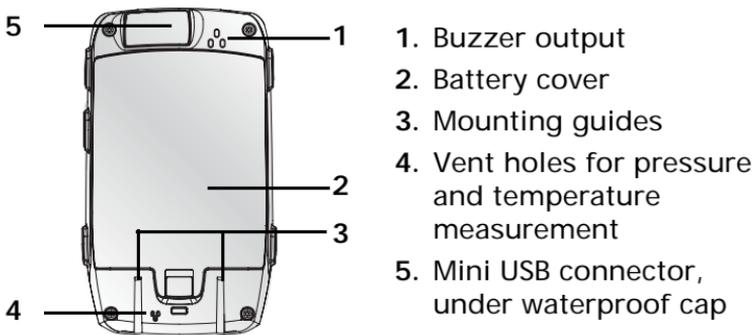



Figure 2. The Xplova G3 back

Included Accessories


The Xplova G3 includes the items shown in Figure 3. Check to make sure all items are included in the package; contact your Xplova retailer immediately if anything is missing.

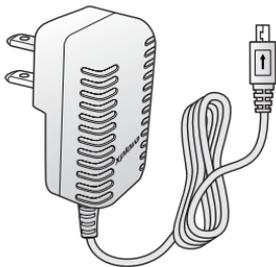

Power supply

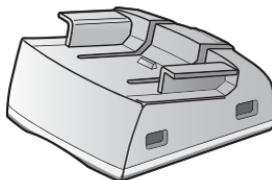

Stem bike mount

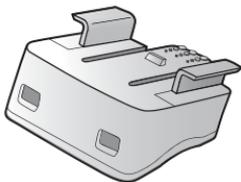

Handle bar bike mount



Cable ties

Figure 3. Accessories included with the Xplova G3

Features of the Xplova G3

The Xplova G3 is the premier GPS Bike Computer for serious cyclists the world over. The intuitive, durable design of the Xplova G3 delivers maximum usability in a variety of outdoor environments.

- 2.2" sunlight readable color display
- Replaceable rechargeable Li-iron battery, typical operation time is 10 hrs
- High precision GPS receiver
- IPX4 and IPX7 waterproof and anti-shock design
- Low power digital wireless sensors support (ANT+)
- Barometric altimeter, 3-D digital compass & thermometer

Record/View Cycling Data

Get the most out of your workout with the wireless Xplova G3. Receive real-time data for monitoring time, distance, speed, altitude, heart rate, cadence, calories burned and more, to enhance your physical performance.

- View and record real-time cycling data
- Review cycling data history in graphic charts on the device
- Monitor body conditions with warnings for speed, heart rate and cadence
- Mark different riding paths with the lap function
- Set up training program for time, distance or calories

Smart-Sign™ Track Navigation

Xplova Smart-Sign™ is a group of markers such as waypoints, POI (Point of Interest), slope information, mountain peaks, turn-by-turn directions that are assigned by user's need or automatically generated by Xplova Smart-Route™ engine. Smart-Sign™ track navigation supports:

- Turn-by-turn guidance and Smart-Sign approaching alert on planned track
- Navigating on auto zoom and contour line enabled OSM maps
- Shows position on an elevation profile while in the track navigation mode
- A Track back function to help you find the way back to your original starting point

Real-time Analysis Chart

The Xplova G3 support real-time analysis to monitor and analyze speed, time, distance, heart rate, cadence, and calories by ANT+™ wireless-enabled sensors such as Heart Rate Monitor, Speed/Cadence Combo Sensor and power meter(3rd party) etc.

Training

The Xplova G3 also provides a Training mode with time, distance and calorie burned thresholds to help you setup your own training program.

Optional Accessories

The Xplova G3 can be paired with two optional accessories that provide you a complete solution for cycling and outdoor activities. The heart rate monitor (HRM) measures heart rate for tracking cardiovascular performance during a workout. The combo cadence sensor attaches to your bicycle's chainstay and provides precise readings throughout your ride. These accessories give you a complete picture of your workout performance, and as we will see in later sections, can show you how hard you are working in different segments of your route.

If you have already purchased these accessories, follow the instructions in "Using your Accessories" on page 65 to pair and install the devices. If you haven't yet made your purchase, inquire at your local Xplova distributor for details.

Charging the Xplova G3

Before using your Xplova G3, make sure it is properly charged and ready to go. Charge the Xplova G3 for at least 5 hours before first use to make sure the batteries are fully charged.

To charge the Xplova G3:

1. Remove the battery cover.
2. Insert the battery.
3. Replace the battery cover as shown in Figure 4.

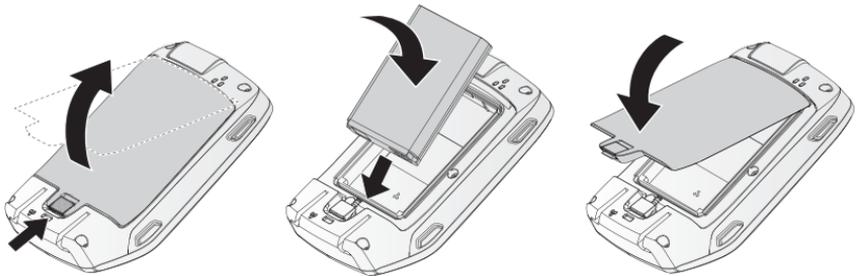


Figure 4. Replace the battery

Note: Notebook with rate voltage of 5VDC (USB) is required.
See "Battery Charger (Optional)" on page 76

4. Plug the power supply included in the package into a wall outlet.
5. Open the protective silicone door on the base of the Xplova G3.
6. Plug the USB adapter into the port as shown in Figure 5.

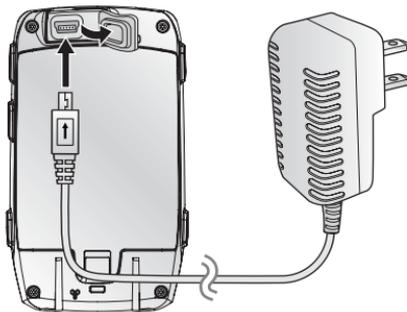


Figure 5. Connecting the charger to the Xplova G3

Powering up the Xplova G3

After charging the Xplova G3, you are ready to begin using it. Pressing the Power button located on the left side of the Xplova G3 turns it on. During startup, it displays a splash screen while it loads map databases into the system. Once the system starts and complete device initial settings, the bike computer view appears as shown in Figure 6.

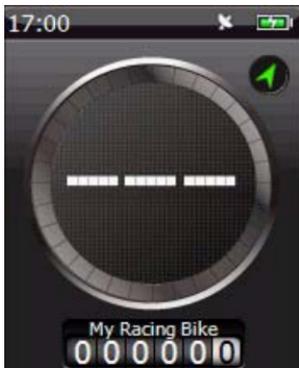


Figure 6. The bike computer main screen*

Note: *The screen may appear differently from Figure 6

Using the Button Controls

The side button controls not only allow you to power up the Xplova G3, but also to access brightness and volume controls, switch between modes, record sessions, and support general settings.

Adjusting Brightness and Turn On/Off Volume

To adjust brightness and volume, briefly press the Power button. The brightness and volume controls appear on screen as shown in Figure 7. You can adjust volume or brightness by 5-way control stick. You also can adjust brightness by pressing the power button again while the brightness control is still displayed. The Power button toggles backlight brightness between off, the last intermediate current set, and maximum brightness.



Figure 7. Brightness and volume controls

Switching Modes

You can switch Bike Computer, Map, Chart and Training mode quickly by pressing the Mode button on the left side of the Xplova G3. The display mode as shown in Figure 8.



Figure 8. The display mode

To show the next page of the mode:

While in Bike Computer or Chart mode.

1. Use the control stick to scroll up and down through the page of a mode.

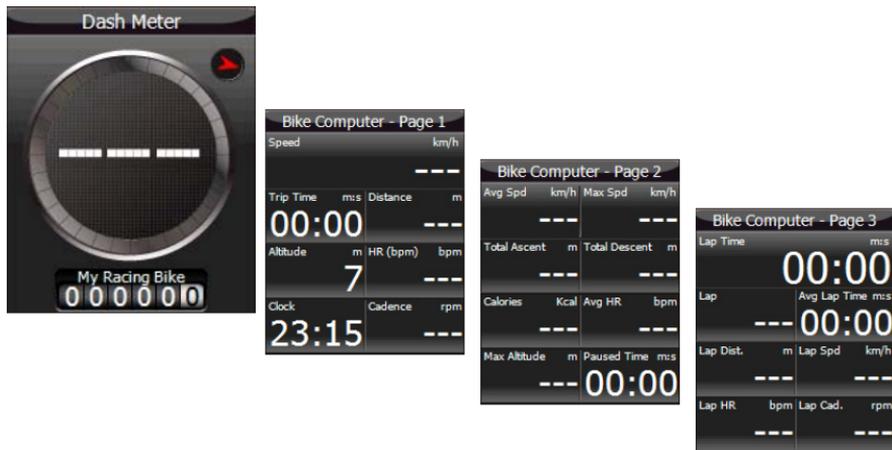


Figure 9. Screen of Bike Computer pages

Recording a Session

You can use the record button to start a new record, pause record, continue record, and stop record.

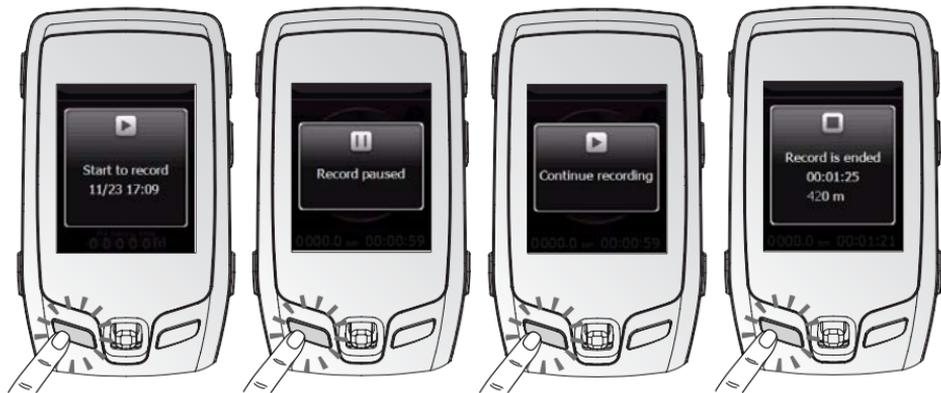


Figure 10. Recording with the side control button

To record a session using the side button controls:

1. Press the Record button. A splash screen appears and confirms that a session has started.
2. Press the Record button quickly to pause/continue the recording.
3. Press the Record button again for more than 2 seconds to stop and save the recording.

Locking the Screen

You can lock down the screen to prevent unwanted commands or changes from being entered via the screen.

To lock the screen:

1. Press the Power button for 3 seconds. Scroll to **Lock** and press the control stick down.
2. To unlock the screen, press the + button for 3 seconds.

Power Options

The Power button can also be used to power down or put the Xplova G3 into standby mode:

- **Power off:** Turns the device off completely so it uses no power. When restarting, the Xplova G3 will need to reboot and reload maps and settings
- **Standby:** Powers down the screen, processor, and antennas but preserves power to the memory so that it quickly boots to its previous state when powered on. A green LED flashes intermittently to indicate when the device is in standby. Note that Standby mode does consume power. The Xplova G3 automatically powers down from standby mode after 24 hours

To view power options on the Xplova G3:

1. Press the Power button for 3 seconds. The screen as shown in Figure 11.



Figure 11. The power-down options menu

2. Use the control stick to select the desired power mode.
3. Press the control stick to select power mode.

Menu

The Xplova G3 supports 2 menu types: General Menu and Quick Menu.

To show the general menu:

1. Press the Menu button. The General Menu screen as shown in Figure 12.

2. For details of the General Menu see “Changing Settings” on page 43.



Figure 12. The general menu

To show the quick menu:

1. Press the control stick down to call up a quick menu of the mode.
2. For details of the Quick Menu see “Using the GPS Bike Computer” on page 25.

Note: Press the Mode button to exit a menu.

Creating a Profile

There are two profile types in the Xplova G3: User profiles and bike profiles. After you setting profiles, you can accurately record the distance travelled on your bike and begin tracking performance. For details see “User and Bikes” on page 49.

Acquiring a GPS Signal

The Xplova G3 comes fully equipped with X-Navi technology designed to maximize your cycling experience. The Xplova G3 automatically searches for a GPS signal and announces your location as soon as it acquires a signal. Go outside to an area free from tall obstructions to use your Xplova G3. The greater the exposure, the faster the Xplova G3 will be able to acquire a signal. Signal acquisitions can take 5-15 minutes to complete under open skies.

Note: GPS signals are very high frequency and do not transmit well through solids. Tunnels, bridges, and heavy leaf cover can all disrupt acquisition and maintenance of a GPS signal.

Signal acquisition is required for the following reasons:

- The first time the device has been powered on
- You have moved hundreds of Km from the previous setting
- The device has not been used in several days

Connecting to Sensors

If you plan to use the optional combo cadence sensor and/or heart rate monitor, you will need to pair the devices with your Xplova G3 before you can use them. See “Using your Accessories” on page 65 for details.

Mounting the Xplova G3

Now that you have familiarized yourself with the basic functions and controls of the Xplova G3, you are ready to mount it to your bicycle.

The Xplova G3 includes stem bike mount and handle bar bike mount for your bicycle.

To mount the Xplova G3:

1. Identify the preferred mounting location. You can accomplish this by attaching the Xplova G3 to the mounting clip and holding it in various locations on the handlebars, stem, and frame.

2. Once you have decided on a location, apply the rubber sleeving to the area as shown in Figure 13.

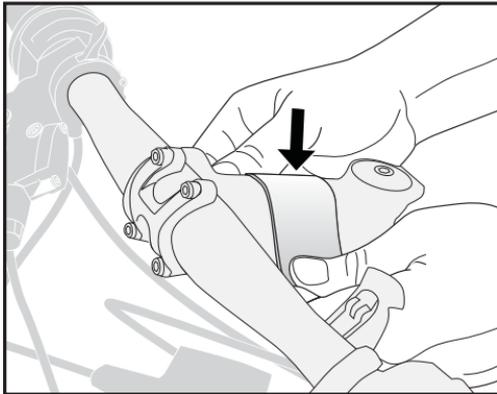


Figure 13. Applying the rubber sleeving

3. Thread two of the included cable ties through the bike stem mount base of the mounting clip as shown in Figure 14.

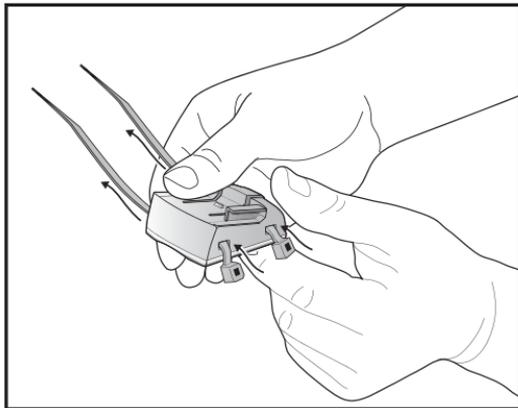


Figure 14. Threading cable ties

4. Slide the rubber base of the mounting clip into the bottom of the mounting clip so the semicircular groove is parallel with the bike component you are attaching the clip to.

5. Cinch the cable ties around the bike component loosely and make final adjustments to the position of the mounting clip, as shown in Figure 15.

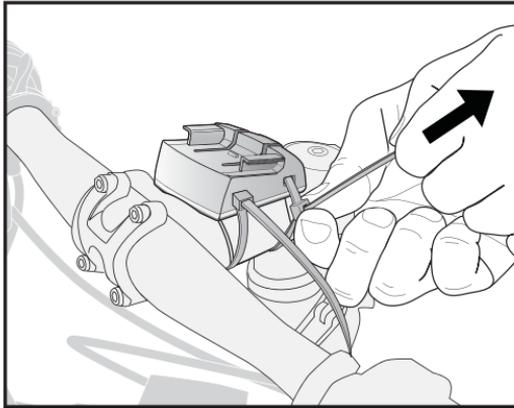


Figure 15. Attaching the mounting clip

6. Cinch the cable ties tightly until the mounting clip is securely in place.

7. Slide the Xplova G3 onto the mounting clip as indicated in Figure 16 until it clicks into place.

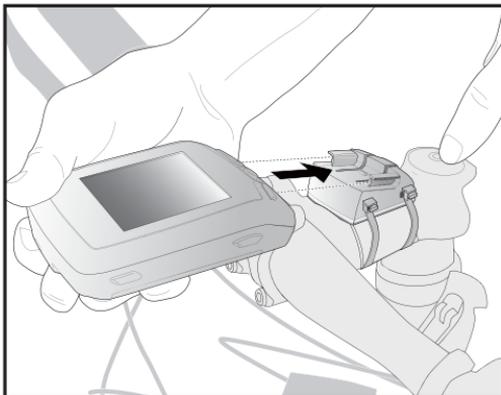


Figure 16. Attaching the Xplova G3 to the mounting clip

NOTE: Handle bar installation is similar to the stem mount.

Using the GPS Bike Computer

Bike Computer Mode

The Bike Computer Interface

The bike computer interface contains the controls and displays shown in Figure 17.



1. Time
2. Recording Status
3. Combo Cadence Status
4. Heart Rate Monitor Status
5. GPS Status
6. Battery Status
7. Heart Rate Bar (Optional)
8. Odometer
9. Current Cadence (Optional)
10. Cadence Bar (Optional)
11. Current Heart Rate (Optional)

Note: Optional items only appear when accessories are set up.

Figure 17. The Bike Computer Interface (Dash Meter)

Table 1 describes the controls and displays shown in Figure 17.

Table 1. Bike computer controls and displays

Item	Description
Record	Shows the status of start or pause logging a session
Combo Cadence	Shows connection to accessories
Battery	Shows battery charge
GPS	Shows GPS connectivity
Heart Rate Monitor	Shows connection to accessories
Heart Rate Bar	Shows heart rate
Odometer	Shows the accumulated distance travelled on the current bicycle profile
Cadence Bar	Shows cadence
Time	Shows the current time

Quick Menu of Bike Computer

Press the control stick down to call up a quick menu of Bike Computer mode.

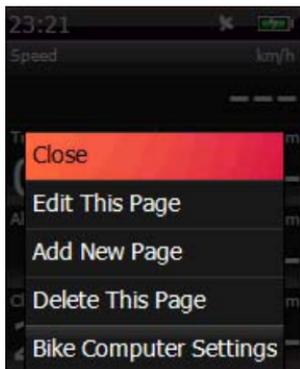


Figure 18. Quick menu of bike computer

Before you select a bike, you must set bike profiles. For details see “Bike Profile” on page 50.

To select a bike:

1. Scroll to Select Bike and enter.
2. Scroll to the desired bike.
3. Press the control stick to save.

To set bike computer settings refer to “Bike Computer Settings” on page 45.

To edit pages:

Before you editing pages, switch page to other page, but not dash meter. Then press the control stick to call up a quick menu. For details see “Editing Pages” on page 40.

Bike Computer Data

The bike computer view can be easily configured to show only the items that you need. Each of the displays, including the main display, can be changed or reordered to meet your specific requirements. Possible items include the following:

- **Elevation:** Shows the current altitude
 - **Maximum Elevation:** Shows the highest altitude encountered in the current session. Appears blank when not logging
 - **Total Ascent:** Shows the total distance ascended in the current session
 - **Total Descent:** Shows the total distance descended in the current session. Appears blank when not logging
- **Cadence:** Shows the current revolutions per minute
 - **Average Cadence:** Shows the average revolutions per minute in the current session
 - **Maximum Cadence:** Shows the highest cadence in the current session
 - **Lap:** Shows the average revolutions per minute in the current lap

- **Calories:** Shows the accumulated calories burned in the current session
 - **Calories Burned Rate:** Shows the calories burned rate in the current session
 - **Remain Training Calories:** Shows the remaining calories to burn in a training session
- **Distance:** Shows the accumulated distance travelled in the current session
 - **Lap Distance:** Shows the accumulated distance since the last lap marker was set
 - **Last Lap Distance:** Shows the length of the last lap
 - **Distance to next turn:** Shows the distance to the next turn if navigation guidance is being used
 - **Remain Track Distance:** Shows the remaining distance to travel in a track session
 - **Remain Training Distance:** Shows the remaining distance to travel in a training session
- **Heart Rate:** Shows the current heart rate
 - **Average Heart Rate:** Shows the average heart rate during the current session
 - **Maximum Heart Rate:** Shows the maximum heart rate achieved during the current session
 - **Lap Heart Rate:** Shows the average heart rate during the current lap

- Last Lap Heart Rate: Shows the average heart rate during the last lap
- Laps: Shows the number of laps traversed during the current session
- Speed: Shows the current speed
 - Average Speed: Shows the average speed of the current session
 - Maximum Speed: Shows the maximum speed achieved during the current session
 - Lap Speed: Shows the average speed during the current lap
 - Last Lap Speed: Shows the average speed in the last lap
- Slope: Shows the current slope
 - Maximum Slope: Shows the maximum slope experienced during the current session
- Time: Shows the current time
 - Clock: Shows the current time in a 24 or 12-hour format
 - Trip Time: Shows the elapsed time for the current session
 - Average Lap Time: Shows the average time elapsed for each lap
 - Lap Time: Shows the elapsed time for the current lap
 - Last Lap Time: Shows the elapsed time for the last completed lap
 - Paused Time: Shows the duration since the recording was paused

- Remain Time: Shows how much time is remaining if in a training session
- Start Time: Shows the time that the session was started
- Estimated Arrival Time: shows how much longer before arriving at a destination designated on the map
- Date: Shows the current date
- Direction: Shows the current direction
- Latitude: Shows the current latitude
- Longitude: Shows the current longitude
- Sunrise: Shows the sunrise time
- Sunset: Shows the sunset time
- Temperature: Shows the current temperature

Map Mode

The Map Interface

The map interface contains the controls and displays shown in Figure 19.

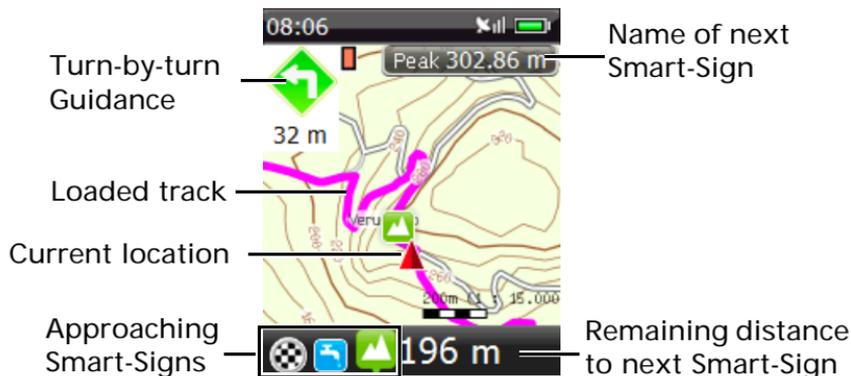


Figure 19. The map interface

Quick Menu of Map

Press the control stick down to call up a quick menu of the Map mode.



Figure 20. Quick menu of map

To load a track:

Before loading a track, preplanned tracks must be transferred from PC to Xplova G3.

1. Scroll to the desired track.
2. Press the control stick to load the track.

Note: If you want to load other track, you must call up quick menu to **Stop Navigation**, and load a new one.

To view Smart-Signs:

1. Scroll to View Smart-Signs and enter.
2. Scroll to the desired sign and enter. A screen appears showing the following information:
 - Sign name: Smart-Sign name
 - Latitude and Longitude: The location of Smart-Sign

To edit pages or set map settings refer to “Editing Pages” on page 40 and “Map Settings” on page 47.

Track Navigation & Smart-Sign™ Guidance

After loading a Smart-Route™ Track, you can view the track on the Xplova G3 and view the Smart-Signs™ near by current position. The Xplova G3 will then navigate you through the Track and guides you with turn-by-turn directions and Smart-Sign™ approaching Alert.

Chart Mode

Chart mode supports graphic of the identification to help you understand the relationship between chart information.

The Chart Interface

The chart interface displays a real-time chart of your riding data as shown in Figure 21.



Figure 21. The chart interface

Quick Menu of Chart

Press the control stick to call up a quick menu. For details see “Editing Pages” on page 40.

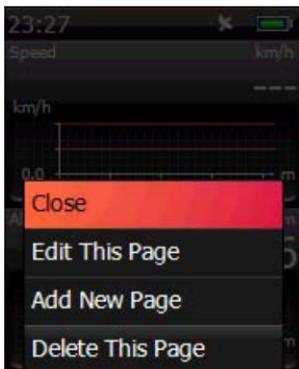


Figure 22. Quick menu of chart

Elevation Profile

In the elevation profile, the vertical axis represents the height, the horizontal axis represents the distance, shows curve in the ups and downs along the track line. The elevation profile displays shown in Figure 23.



Figure 23. The elevation profile

Note: The elevation profile displayed when desired track is loaded.
About loading a track refer to page 33.

Training Mode

Training mode help you achieve performance goals during a ride. When your session has reached predefined limits for distance, time, or calories burned, the Xplova G3 ceases logging data.

The Training Interface

The training interface displays a real-time chart and training goal of your training as shown in Figure 24.



Figure 24. The training interface

Quick Menu of Training

Press the control stick down to call up a Training quick menu.

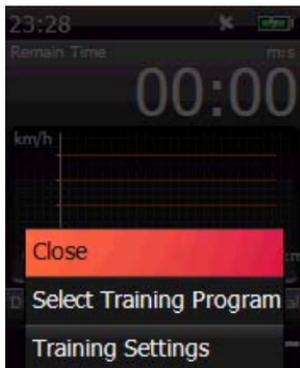


Figure 25. Quick menu of training

To select training mode:

1. Scroll to **Select Training Program** and enter.
2. Select a training mode and enter:
 - Training By Time
 - Training By Distance
 - Training By Calorie
3. Set up options. Scroll to **Start** and enter.

The Xplova G3 ceases logging the session as soon as your duration, distance, or calorie goal has been met. A prompt opens to indicate that your goal has been met. The summary screen displays the calories burned, time elapsed, and distance travelled.

To set training settings:

For details see “Training Settings” on page 48.

Editing Pages

Edit this Page

You can edit fields in this page or change layout style.

To edit this page:

1. Press the control stick down.
2. Scroll to **Edit This Page** and enter.
3. Scroll to **Change Layout** and enter. If you scroll to **Edit Fields** and enter, then jump to step 5.
4. Use the control stick to choose a layout style, and enter **Next Step**.
5. Use the control stick to assign data types in those fields, and enter **Save**.

Add New Page

You can add additional information in a new page.

To add a new page:

1. Press the control stick down.
2. Scroll to **Add New Page** and enter.
3. Use the control stick to choose a layout style, and enter **Next Step**.
4. Use the control stick to assign data type in those fields, and enter **Save**.

Delete this Page

If you don't want to display this page, you can delete it.

To delete this page:

1. Press the control stick down.
2. Scroll to **Delete This Page** and enter.

Changing Settings

The Xplova G3 has a number of customisable settings available so you can control functionality and personalize your device.

My Data

My Data supports the following: Activities, Tracks and Training History.

To query my data:

1. Press the Menu button.
2. Scroll to **My Data** and enter.
3. Scroll to the desired category and enter.
4. Select an item within the category and enter. Then scroll up or down to view the listed items.
5. Press the Mode button to return to the category list.
6. Press the Mode button to return My Data.
7. Press the Mode button to return General Menu.

To delete items:

1. Press the Menu button.
2. Scroll to **My Data** and enter.
3. Scroll to **Delete Data** and enter.
4. Select a category and enter.
5. Select a time range to delete or delete all. Press **Yes** to delete data.
6. Press the Mode button to return Delete Data.
7. Press the Mode button to return My Data.
8. Press the Mode button to return General Menu.

Mode Selection

Mode selection menu can enable/disable Chart mode and Training mode.

To enable or disable Chart/Training mode:

1. Press the Menu button
2. Scroll to **Mode Selection** and enter.
3. Use the control stick to turn the display mode on or off.
4. Press the Mode button to save and back to General Menu.

Bike Computer Settings

Bike Computer Settings control the Alert and Recording settings. This menu can also be quickly accessed in Bike Computer mode.

To access the bike computer settings quickly:

1. From Bike Computer mode, press enter.
2. Scroll to **Bike Computer Settings** and enter. The Settings menu appears.

Setting up Alert

Alerts help you to stay within predefined ranges during your bicycle riding. You can program the Xplova G3 up to alert you when you exceed set durations or distances, or go below or above a set speed, cadence limit, or heart rate.

When the Xplova G3 detects that you have exceeded your predefined range during bicycle riding, it emits an audible alarm as well as visual alarm.

To set up alert:

1. Press the Menu button.
2. Scroll to **Bike Computer Settings** and enter.
3. Scroll to **Alert** and enter.
4. Choose one or more parameters to use for your warning. You can set warnings for the following:
 - Time: Set a duration after which the alarm will sound

- Distance: Set a distance after which the alarm will sound
 - Speed: Set a minimum and maximum speed beyond which the alarm will sound
 - Heart Rate: Set a minimum and maximum heart rate (in revolutions per minute) beyond which the alarm will sound
 - Cadence: Set a minimum and maximum cadence (in beats per minute) beyond which the alarm will sound
5. Press the Mode button to save and back to the Bike Computer Settings.
 6. Press the Mode button to back to the General Menu.

Setting up Recording Options

The Xplova G3 allows you to smart-pause and smart-lap while recording a session.

- Smart Pause keeps the Xplova G3 from logging data if your speed falls below a customisable threshold
- Smart Lap enters a lap marker into the log according to location or after travelling a predefined distance
 - Distance: type a distance to travel between inserting lap markers

To set recording options:

1. Press the Menu button.
2. Scroll to **Bike Computer Settings** and enter.
3. Scroll to **Recording** and enter.

4. Select how the Xplova G3 automatically enters lap markers:
 - Smart Pause: Pauses the recording every time your speed falls below your specified limit
 - Smart Lap: Starts a new lap at a preselected distance.
5. Press Mode button to save and back to the Bike Computer Settings menu.
6. Press the Mode button to save and back to the General Menu.

Map Settings

Map settings change how the map are viewed. The Settings menu can be quickly accessed in Map mode:

To access the map settings quickly:

1. From Map mode, press the control stick down.
2. Scroll to **Map Settings** and enter. The Settings menu appears.

Changing the Map View

The map view can be changed to show either a North Up view or Head Up view. You can also enable or disable Smart-Sign on Map and Smart-Sign Distance.

To change map view:

1. Press the Menu button.

2. Scroll to **Map Settings** and enter.
3. Use the control stick to select and change the options.
4. Press the Mode button to save and back to General Menu.

Training Settings

This selection automatically saves your training sessions for a historical training record.

To access the training settings quickly:

1. From Training mode, press the control stick down.
2. Scroll to **Training Settings** and enter. The Settings menu appears.

To save training history automatically:

1. Press the Menu button.
2. Scroll to **Training Settings** and enter.
3. Turn the **Auto Save On**. The selected option is in red.
4. Press the Mode button to save and back to the General Menu.

User and Bikes

There are 2 profile types in the Xplova G3: User profile and Bike profile.

User Profile

In the user profile, you can edit information about yourself and set up a heart rate monitor if it is available.

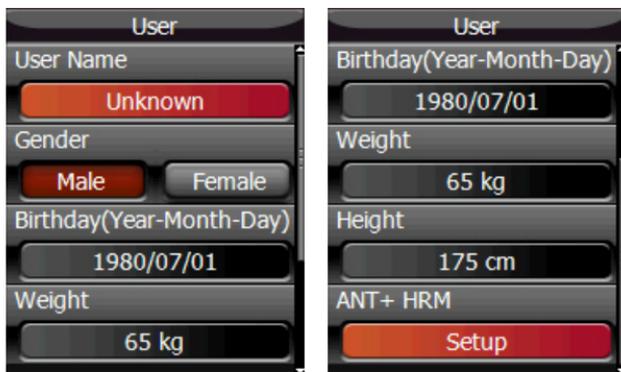


Figure 26. User profile

To edit the user profile:

1. Press the Menu button.
2. Scroll to **User and Bikes** and enter.
3. Scroll to **User** and enter.

4. Scroll to **Name** field and enter.
5. Type your name and select **Ok**.
6. Select your gender.
7. Scroll to **Birth Date** field and type the Year, Month, and Day you were born as prompted, selecting **Ok** after each entry.
8. Scroll the **Weight** field, type your weight and select **Ok**.
9. Scroll the **Height** field, type your height and select **Ok**.
10. Scroll to the **ANT+HRM** field, and enter **Setup**. See "Heart Rate Monitor (Optional)" on page 65 for information on the heart rate monitor sensor.
11. Press the Mode button to save and return to user profile.
12. Press the Mode button to save and return to the User and Bikes menu.

Bike Profile

In the bike profile settings, there are up to three bike profiles that can be set up and configured for the cadence sensor in each bike profile if the cadence sensor is available.



Figure 27. Bike profile

To edit a Bike Profile:

1. Press the Menu button.
2. Scroll to **User and Bikes** and enter.
3. Select the bike profile that you want to change and enter.
4. Scroll to the **Name** field, type the name of your bike, and select **Ok**.
5. Select the status.
6. Scroll to the **Odometer** field and type the value of odometer for the bike.
7. Scroll to the **Weight** field and enter the bikes weight.
8. Scroll to the **Wheel Size** field and enter the bike wheel size.

9. Scroll to the **ANT+Combo Cadence** and enter **Setup**. See “Combo Cadence Sensor (Optional)” on page 68 for information on the cadence sensor.
10. Press the Mode button to save and return to bike profile.
11. Press the Mode button to save and return to the User and Bikes menu.

General Settings

General settings include the items listed in Table 2.

Table 2. General settings menu items

Menu Item	Description
Satellites	Turn the GPS receiver on or off to view the satellite signal. See “Satellites” on page 53.
Display	Turn the backlight timer and brightness on or off. See “Display” on page 55.
Sounds	Open a screen to turn the sound on or off for key press and notifications. See “Sounds” on page 56.
Time	Set time zone, daylight saving and clock formats (12- or 24-hour days). See “Time” on page 56.
Units	Select units of measurement for distance, altitude and temperature. See “Units” on page 57.
Language	Select a language for menus. See “Language” on page 58.

Table 2. General settings menu items

Menu Item	Description
Altimeter Calibration	Calibrate the barometric altimeter sensor. See "Altimeter Calibration" on page 58.
Compass Calibration	Calibrate the compass sensor. See "Compass Calibration" on page 60.
Factory Reset	Allows for restoration of factory defaults. See "Press the Mode button to back to the General Settings." on page 61.
About	Displays hardware and software information. See "About" on page 63.

Satellites

If you are indoors or do not require the GPS receiver to be active you can turn it off from the general settings menu. You can also reset the receiver to drop all active GPS channels and reacquire GPS satellite signals. If the Xplova G3 is unable to fix your current position, it is recommended that you reset the GPS receiver.

Note: If the Xplova G3 does not detect a GPS signal after five minutes, it prompts you to continue searching for GPS signals. Continue searching in background mode, or turn off the GPS receiver. Background search mode keeps the receiver actively searching for GPS signals but does not display the prompt.

To deactivate or activate the GPS receiver:

1. Press the Menu button.
2. Scroll to **General Settings** and enter.
3. Scroll to **Satellites** and enter.
4. Scroll to **GPS Status**.
5. Use the control stick to turn the GPS on or off. The selected option is in red.
6. Press the Mode button to save and back to the general settings menu.

To reset the GPS receiver:

1. Press the Menu button.
2. Scroll to **General Settings** and enter.
3. Scroll to **Satellites** and enter.
4. Scroll to **Reset GPS** and enter.
5. Press the Mode button to go back to the General Settings.

To view GPS Info:

1. Press the Menu button.
2. Scroll to **General Settings** and enter.
3. Scroll to **Satellites** and enter.
4. Scroll to **Satellite Signal** and enter. A screen appears displaying the following information:
 - **GPS quality:** Displays the quality of the signal from GPS satellites.
 - **Satellites:** Displays the number of satellites in earth orbit.

5. Press the Mode button to go back to Satellites.
6. Press the Mode button to go back to General Settings.

Display

When active, the backlight timer shuts down the screen backlight to reduce power use. You can specify a duration for the backlight timer. In addition to backlight timer, you can adjust brightness, too.

To activate or deactivate the backlight timer:

1. Press the Menu button.
2. Scroll to **General Settings** and enter.
3. Scroll to **Display** and enter.
4. Scroll to **Backlight**.
5. Select a duration for the backlight timer. Options include 15 seconds, 30 seconds, 1 minute, 5 minutes, or always on.
6. Press the Mode button to save and back to the General Settings.

To adjust the brightness:

1. Press the Menu button.
2. Scroll to **General Settings** and enter.
3. Scroll to **Display** and enter.
4. Scroll to **Brightness**.
5. Select a duration for the brightness. There are 10 levels, level 0 is minimum and level 9 is maximum.
6. Press the Mode button to save and back to the General Settings.

Sounds

You can enable or disable sounds in the Sounds setting.

To turn on the sound:

1. Press the Menu button.
2. Scroll to **General Settings** and enter.
 1. Scroll to **Sounds** and enter.
 2. Use the control stick to enable or disable the sound of key press and notifications.
 3. Press the Mode button to save and back to the General Settings.

Time

The Xplova G3 updates its clock from time signals received from the GPS channel. These signals are received in Universal Time Coordinated (UTC) and need to be adjusted to display the correct local time.

To set the time zone:

1. Press the Menu button.
2. Scroll to **General Settings** and enter.
3. Scroll to **Time** and enter.
4. Scroll to **Time Zone**.
5. Select a time zone by using the control stick.
6. Press the Mode button to save and back to the General Settings.

To set the time format:

1. Press the Menu button.
2. Scroll to **General Settings** and enter.
3. Scroll to **Time** and enter.
4. Scroll to **Time Format**.
5. Select a time format by using the control stick.
6. Press the Mode button to save and back to the General Settings.

To set the daylight saving:

1. Press the Menu button.
2. Scroll to **General Settings** and enter.
3. Scroll to **Time** and enter.
4. Scroll to **Daylight Saving**.
5. Use the control stick to turn the daylight saving on or off.
6. Press the Mode button to save and back to the General Settings.

Units

Depending on your preference, you can display either metric or statute (Imperial) units on the Xplova G3. In addition, coordinates can be displayed in terms of degree-minutes-seconds or decimal degrees, and heart rate as a percentage of your maximum as calculated by your age.

To set units of measurement:

1. Press the Menu button.
2. Scroll to **General Settings** and enter.

3. Scroll to **Units** and enter.
4. Select a unit format by using the control stick.
5. Select a unit format for temperature by using the control stick.
6. Press the Mode button to save and back to the General Settings.

Language

The language on the Xplova G3 can be changed to suit your preference.

To set the language:

1. Press the Menu button.
2. Scroll to **General Settings** and enter.
3. Scroll to **Language** and enter.
4. Use the control stick to set the language.
5. Press the Mode button to save and back to the General Settings.

Altimeter Calibration

The Xplova G3 measures altitude using a high-resolution barometric altimeter. The altimeter is highly sensitive to changes in air pressure and may be affected by changing weather conditions in addition to altitude. To ensure the accuracy of the altimeter, Xplova recommends that you periodically calibrate the altimeter.

The best method for calibrating the altimeter is to find a nearby survey marker that has an accurate altitude measurement engraved or printed on it.



Figure 28. Altimeter Calibration

To calibrate the altimeter:

1. Find a location with a known altitude and place the Xplova G3 at or near the location.
2. Press the Menu button.
3. Scroll to **General Settings** and enter.
4. Scroll to **Altimeter Calibration** and enter.
5. Support three ways to calibrate altimeter.
 - By Current Altitude: Type a new altitude
 - By Smart-Sign: Get a new altitude from Smart-Sign
 - By GPS: Get a new altitude from GPS signal
6. Press the Mode button to save and back to the General Settings.

Compass Calibration

The compass can locate and determine the direction on the map. If you find that the electronic compass direction is not accurate, you can calibrate it.

To calibrate the compass:

1. Press the Menu button.
2. Scroll to **General Settings** and enter.
3. Scroll to **Compass Calibration** and enter.
4. Scroll to **Start Calibration** and enter.
5. Hold the device in your hand and turn your wrist in every direction (3-dimension figure like 8).

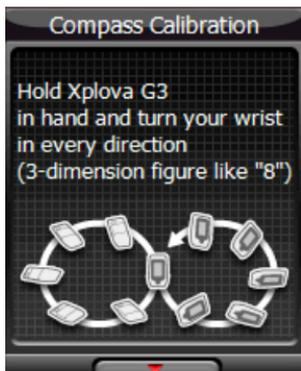


Figure 29. Calibrate Compass

6. Press the Mode button to back to the Compass Calibration.

7. Press the Mode button to back to the General Settings.

To view compass:



Figure 30. Compass View

1. Press the Menu button.
2. Scroll to **General Settings** and enter.
3. Scroll to **Compass Calibration** and enter.
4. Scroll to **View Compass**.
5. Press the Mode button to back to the Compass Calibration.
6. Press the Mode button to back to the General Settings.

Factory Reset

Restoring factory settings replaces user defined settings with factory defaults.

To restore factory settings:

1. Press the Menu button.
2. Scroll to **General Settings** and enter.
3. Scroll to **Factory Reset** and enter.
4. Select **Yes** then enter. The Xplova G3 resets itself.

About

The About screen in the General Settings menu provides the following information:

- Device S/N: Device serial number
- OS Version: OS revision number
- Software Version: Software revision number
- Copyright information

Provide the information listed above to customer service if your Xplova G3 needs service or troubleshooting.



Figure 31. About

Using your Accessories

Heart Rate Monitor (Optional)

The heart rate monitor is attached to an elastic band worn around the chest. This section describes how to pair and wear the heart rate monitor.

Pairing the Heart Rate Monitor

Pairing connects the Heart Rate Monitor to the Xplova G3, allowing heart rate to be recorded and displayed on screen.

To pair the Heart Rate Monitor:

1. Press the Menu button.
2. Scroll to **User and Bikes** and enter.
3. Scroll to **User** and enter.
4. Scroll to **ANT+HRM** and enter Setup.

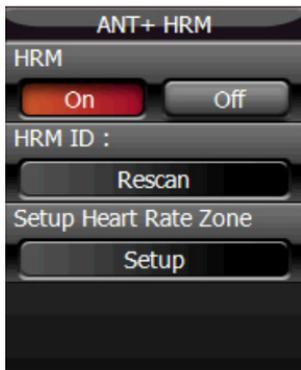


Figure 32. ANT + HRM

5. Select **Rescan** and enter.

6. Rub the ribbed inside edge of the HRM as shown in Figure 33 while holding it near the GPS unit. A popup on the Xplova G3 indicates when the HRM is paired.

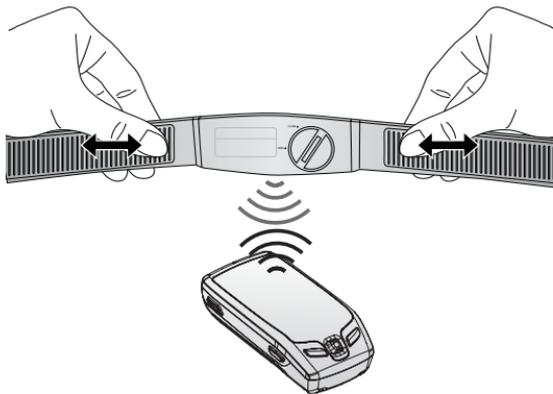


Figure 33. Pairing the heart rate monitor

Wearing the Heart Rate Monitor

The heart rate monitor is worn around the chest as close as possible to the heart with the monitor segment worn in the middle of the chest.

To wear the heart rate monitor:

1. Unbuckle the strap.
2. Wrap around your chest and re-buckle the strap.
3. Adjust the circumference of the band to fit.

Changing the Heart Rate Monitor Battery

The heart rate monitor is powered by a 3-volt CR2032 battery mounted inside the sensor.

To change the heart rate monitor battery:

1. Using a coin, turn the battery cover on the back of the sensor clockwise until it opens.
2. Remove the old battery and replace with a new one
3. Replace the battery cover and tighten with a coin.

Combo Cadence Sensor (Optional)

The combo cadence (includes the cadence sensor and a speed sensor) attaches to the chainstay of your bike. It helps you accurately track performance during sessions.

Pairing the Combo Cadence Sensor

Up to three combo cadence sensors on three bikes can be paired with one Xplova G3.

To pair a combo cadence sensor:

1. Press the Menu button.
2. Scroll to **User and Bikes** and enter.
3. Scroll to required bike and enter.
4. Scroll to **ANT+Combo Cadence** and enter **Setup**.

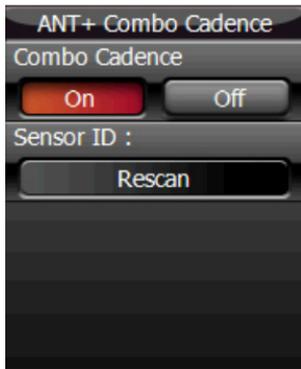


Figure 34. ANT + Combo Cadence

5. Select **Rescan** and enter.

6. Swipe one of the magnets about 1/2 cm from the speed sensor as shown in Figure 35 while holding the sensor near the GPS unit. A popup indicates when the combo cadence is paired.

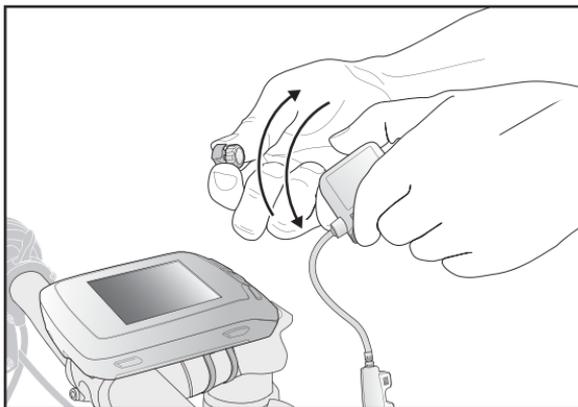


Figure 35. Pairing the combo cadence sensor

Installing the Combo Cadence Sensor

After pairing the sensor you can install it on the selected bike. Before installing the combo cadence sensor, make sure you have the following components in the accessory kit:




Cadence sensor

Speed sensor



Speed magnet

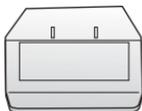

Cadence magnet



Rubber base



Cable ties

Figure 36. Combo Cadence Sensor Parts

To install the combo cadence sensor:

1. Position the sensor on the chainstay as shown in Figure 37.

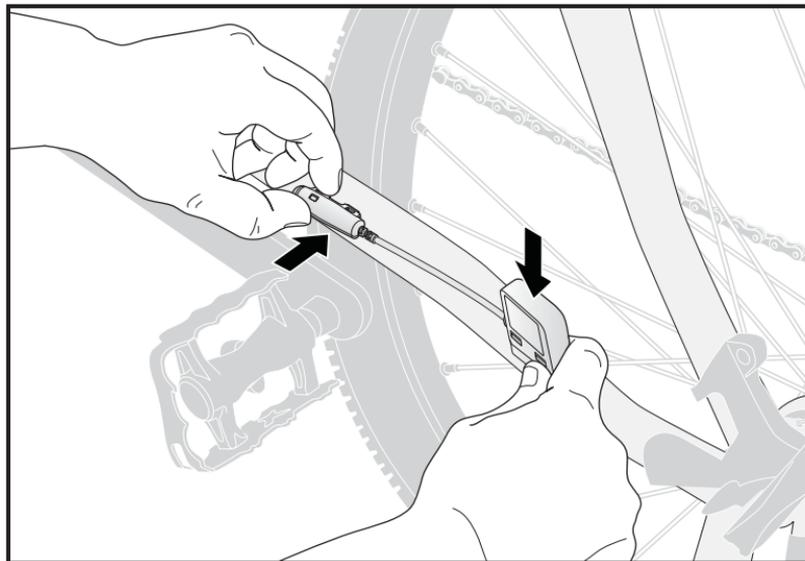


Figure 37. Positioning the combo cadence sensor

2. Use the supplied cable ties to hold the sensor in place as shown in Figure 38. Do not fully tighten.

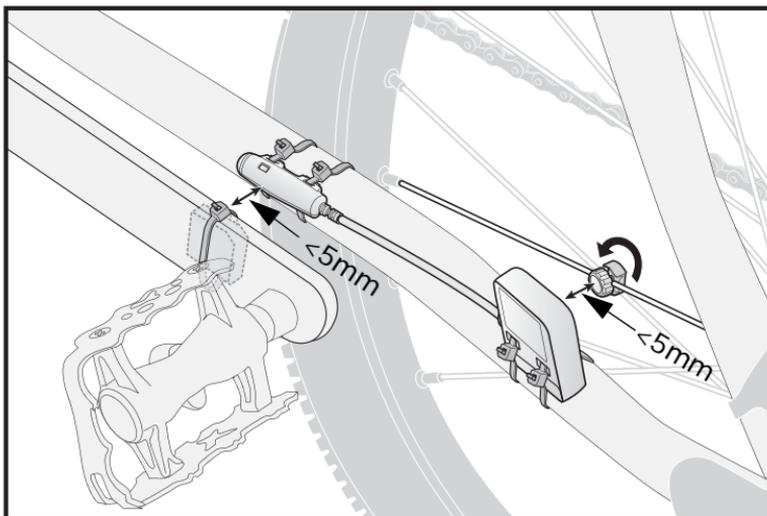


Figure 38. Attaching sensor and magnets

3. Attach the magnet to a spoke as shown in Figure 38. Do not fully tighten.

4. Attach the magnet to the left crank as shown in Figure 39. Do not fully tighten.

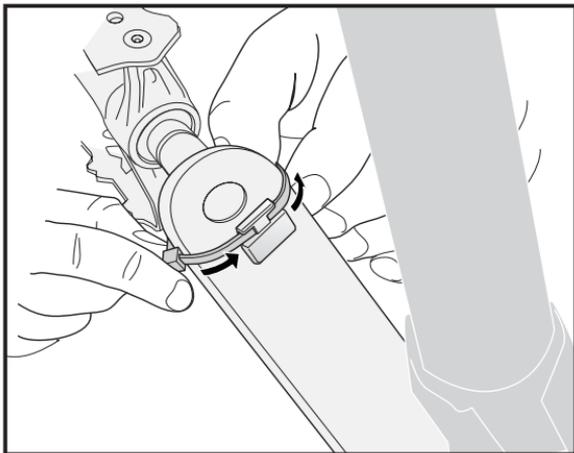


Figure 39. Attaching the cadence magnet to the left crank

5. Adjust magnets and sensors so the air gap between sensor markings and magnets is less than 5 mm.
6. Fully tighten cable ties.

Training with the Combo Cadence Sensor

Once the combo cadence sensor is paired, you can view speed and cadence while in bike computer mode. If speed and cadence are not

displayed on-screen you can customise the view to display them. See “Bike Computer Data” on page 28 for details.

Changing the Combo Cadence Battery

The combo cadence sensor is powered by a 3-volt CR2032 battery mounted inside the speed sensor.

To change the combo cadence battery:

1. Using a coin, turn the battery cover on the back of the sensor clockwise until it opens.
2. Remove the old battery and replace with a new one
3. Replace the battery cover and tighten with a coin.

Battery Charger (Optional)

When the Xplova G3 status LED turns red, the battery needs recharging.

To charge the battery:

1. Connect the battery charger to the power supply.
2. Insert the battery into the battery charger as shown in Figure 40.

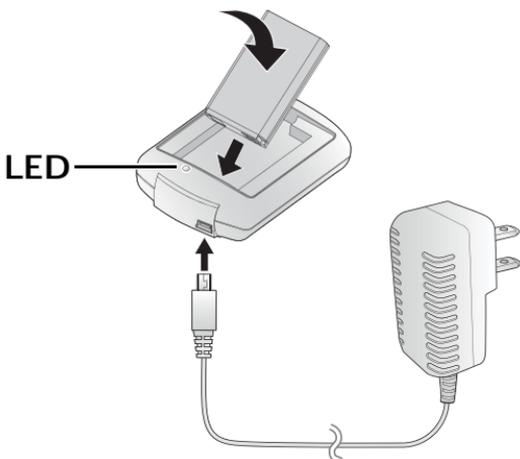


Figure 40. Connect the battery charger

3. Remove the battery from the charger when the status LED turns green.

Using the PC Applications

Feature of X-Tracks™

Backup/View Activity Data

The Xplova G3 generates a quick summary for every completed activity; its chart analysis in speed, altitude, heart rate and cadence help you analyze your performance right after riding. X-Tracks™ backup all activity data in the Xplova G3 and view on computer.

GPX & TRK Import/Export

You can download GPX files from other GPS receivers or TRK from Smart-Route™. Import them into X-Tracks™ or export them to the Xplova G3.

Note: GPX stands for GPS xChange Format.

TRK stands for Xplova Track Format.

Smart-Route™ Track Planner

The Smart-Route™ web service helps you plan a bike route based on your demand. After you plan a route, you can save the route in TRK format and view the route in X-Tracks™.

Download Detail Maps

Download worldwide detail maps from the Xplova map server and install the maps to device.

Updating the Xplova G3 Software

To update the Xplova G3 software:

1. Connect Xplova G3 to your computer and launch X-Tracks. Click on Check Software Update or download the latest image file available on <http://www.xplova.com>
2. Copy the files from computer to the Xplova G3.
3. Disconnect the Xplova G3 and computer.
4. Press and hold on the Power button until an “updating” screen appears.



OS Updating



Firmware Updating

Figure 41. Screens of Updating

5. Follow the on-screen instructions to complete installation.

Note: Make sure battery is fully charged before software updating.
When updating, don't power off the Xplova G3.

Appendix

Specifications

Table 3. Specifications

Model Name	
Model Name	Xplova G3 GPS Bike Computer
Bike computer function	
User configurable multi function information display	Multi-information configurable in different fields: time, speed, distance, altitude, slop, Heart rate, cadence, calories, lap, ...& etc.
Multi information pages	Dash Meter, Bike computer, page 1, Page 2, and Page 3
User profile support	Name, age, gender, weight, height, ANT+HRM
Multi bicycles profile support	Bicycle name, odometer, & accessories.
Data recording	Start/pause/continue/save, lap, clear record
Exercise warning	Speed, time, distance, heart rate, cadence, calories status alert
Training program	Training by time, distance, calories

Table 3. Specifications

GPS Navigation function	
Navigation	Supports planned track turn-by-turn guidance and Smart-Sign Approaching alert
Map support	Built-in 1:75K OSM base map with elevation contour line. Free user downloadable OSM detail map and contour line
Elevation profile	Elevation preview of the route and tracks
Smart-Sign™	Waypoints, mountain peaks, county names, ascent/decent slope information, user configurable markers
Hardware	
Hard Buttons	Power/OSD Button, + Button, - Button, Menu Button, Lap/Reset Button, 5-Way control stick, Record/End Button, Mode/Bike Select Button
GPS	High sensitive -159 dbm
Barometric Altimeter	High resolution Barometric Altimeter
Audio	Buzzer output
Battery	Replaceable and rechargeable Li-iron battery *Typical 10 hrs operation
Indicator	Standby and battery low LED indicator
Charging	from Mini USB
PC connection	USB 2.0, Mini USB

Table 3. Specifications

Physical	
Dimension	99 (L) x 57 (W) x 25 mm (H)
Weight	117 g
Temperature	Operation -10° ~50°C
Environment	IEC Standard 60529 IPX7 waterproof
X-Tracks™ PC tools	
O.S.	Windows XP and later
Activity Manager	Backup, review, analysis, report, export GPX (note1), map view, and photo tagging activity record on PC
Track Manager	Launch Smart-Route™, Smart-Share™ services, track management, track simulation in 3D mode
Map manager	Download OSM map from Xplova map server via the Internet and install map to device
Equipment manager	Equipment usage and mileage calculation and summary
Services	
Smart-Route™	Plan routes, generate Smart-Sign™ & turn-by-turn directions, mark POI (Point of Internet)
Smart-Share™	Share planned-routes via Facebook; export track files in TRK (note2) or GPX formats
Accessories	
Bike Mount	For stem and handle bar

Table 3. Specifications

Rubber pad	Anti-slippery Rubber pad
HRM chest belt (optional)	ANT+ heart rate monitor chest belt
Combo Cadence Sensor (optional)	ANT+ 2-in-1 (Combo) Cadence sensor module (Speed sensor, Cadence sensor)
AC adapter charger	Mini USB Charger, battery charger (optional)
USB cable	Standard mini-USB cable

Note: Actual operation time is dependent on device setting and GPS signal condition. With the backlight off and good GPS signals condition, the battery operation time is about 10 hours

Wheel Size Table**Table 4. Wheel Size***

ETRTO	Tire Size	L (mm)
	12 x 1.75	935
	14 x 1.50	1020
	14 x 1.75	1055
	16 x 1.50	1185
47-305	16 x 1.75	1195
	18 x 1.50	1340
	18 x 1.75	1350
47-406	20 x 1.75	1515
	20 x 1-3/8	1615
	22 x 1-3/8	1770
	22 x 1-1/2	1785
	24 x 1	1753
	24 x 3/4 Tubular	1785
	24 x 1-1/8	1795
	24 x 1-1/4	1905
47-507	24 x 1.75	1890
	24 x 2.00	1925
	24 x 2.125	1965
	26 x 7/8	1920

Table 4. Wheel Size*

ETRTO	Tire Size	L (mm)
23-571	26 x 1(59)	1913
	26 x 1(65)	1952
	26 x 1.25	1953
	26 x 1-1/8	1970
37-590	26 x 1-3/8	2068
	26 x 1-1/2	2100
	26 x 1.40	2005
40-559	26 x 1.50	2010
47-559	26 x 1.75	2023
50-559	26 x 1.95	2050
54-559	26 x 2.00	2055
	26 x 2.10	2068
57-559	26 x 2.125	2070
	26 x 2.35	2083
57-559	26 x 3.00	2170
	27 x 1	2145
	27 x 1-1/8	2155
32-630	27 x 1-1/4	2161
	27 x 1-3/8	2169
	650 x 35A	2090
	650 x 38A	2125

Table 4. Wheel Size*

ETRTO	Tire Size	L (mm)
18-622	650 x 38B	2105
	700 x 18C	2070
	700 x 19C	2080
20-622	700 x 20C	2086
23-622	700 x 23C	2096
25-622	700 x 25C	2105
28-622	700 x 28C	2136
	700 x 30C	2170
32-622	700 x 32C	2155
	700C Tubular	2130
37-622	700 x 35C	2168
	700 x 38C	2180
40-522	700 x 40C	2200

Note: Actual physical size of wheel might be slightly different due to different tire brands, tire pressure, and tire erosion.

Declarations of Conformity

Duales System Deutschland GmbH Participant



CE Declaration of Conformity (CENELEC Europe)



WEEE directive

Disposal of Waste Electrical and Electronic Equipment by users in private households in the European Union.



This symbol on the product or on the packaging indicates that this can not be disposed of as household waste. You must dispose of your waste equipment by handling it over to the applicable take-back scheme for the recycling of electrical and electronic equipment. For more information about recycling of this equipment, please contact your city office, the shop where you purchased the equipment or your household waste disposal service. The recycling of materials will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and environment.